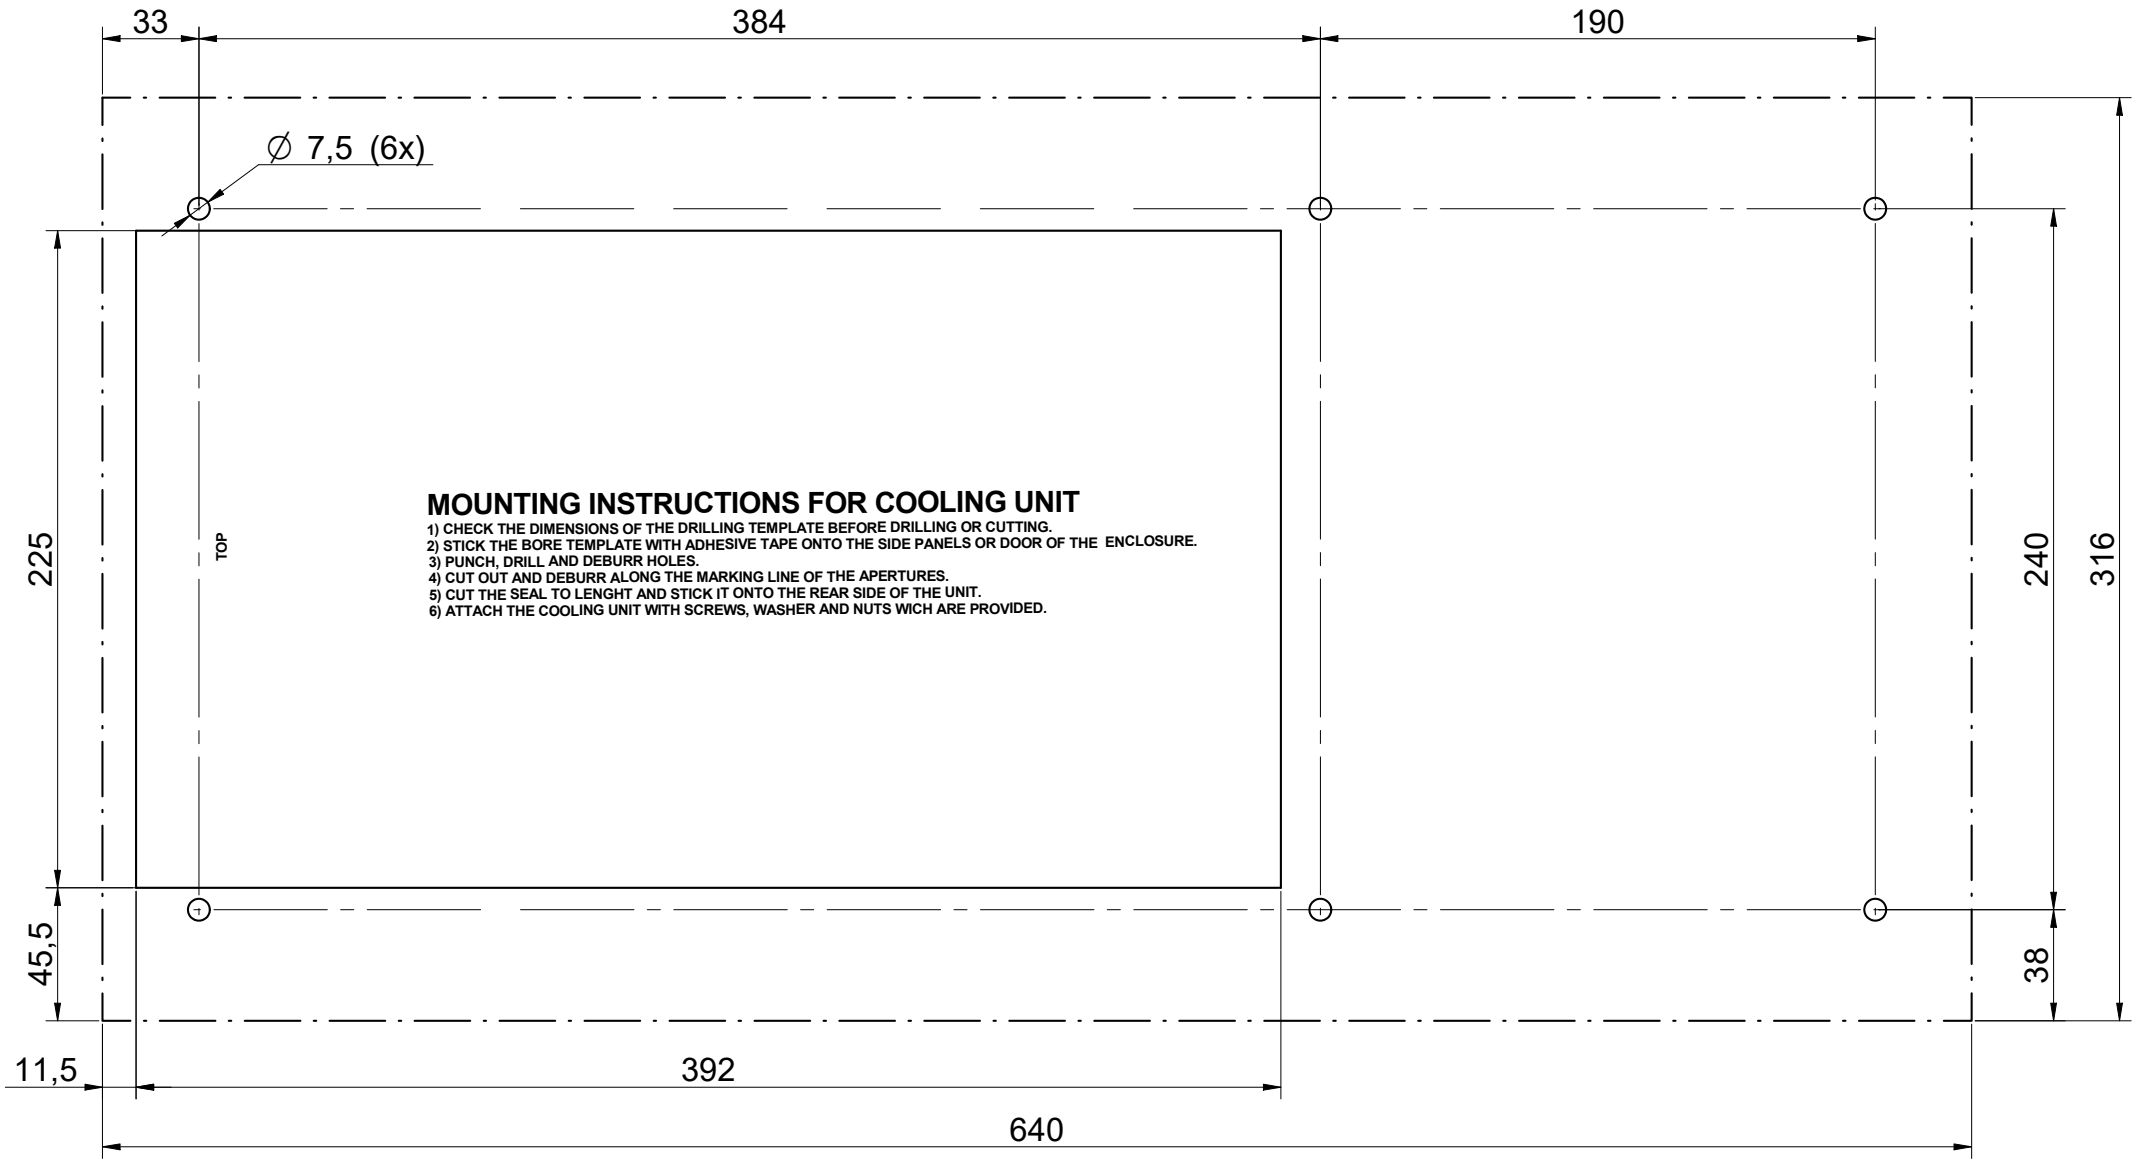

MOUNTING INSTRUCTIONS FOR COOLING UNIT

1) CHECK THE DIMENSIONS OF THE DRILLING TEMPLATE BEFORE DRILLING OR CUTTING.
2) STICK THE BORE TEMPLATE WITH ADHESIVE TAPE ONTO THE SIDE PANELS OR DOOR OF THE ENCLOSURE.
3) PUNCH, DRILL AND DEBURR HOLES.
4) CUT OUT AND DEBURR ALONG THE MARKING LINE OF THE APERTURES.
5) CUT THE SEAL TO LENGHT AND STICK IT ONTO THE REAR SIDE OF THE UNIT.
6) ATTACH THE COOLING UNIT WITH SCREWS, WASHER AND NUTS WICH ARE PROVIDED.

C17000834R00 -ASSEMBLY CUT-OUT FOR EXTERNAL APPLICATION / FORATURA PER MONTAGGIO ESTERNO / MONTAGEAUSSCHNITT AUSSENMONTAGE / PERCAGE POUR MONTAGE A L'EXTERIEUR / CORTE PARA MONTAJE EXTERNO